



ORIGINAL SALZBURGER GETREIDEMÜHLEN MIT NATURSTEIN - GRANIT

DIE GETREIDEMÜHLEN-MANUFAKTUR SEIT 1973

Owner 's Manual and User 's Guide MH 8



For love of nature.....

Dear customer,

We are very pleased that you have bought one of our grain mills and trust that you will enjoy great success in making your healthy whole meal foods.


With your grain mill you have purchased a top-quality household appliance that has been manufactured according to the latest state of the art technology. Please read these operating instructions carefully before you get started!

Give particular consideration to our recommendations on the quality of grains and the care of your mill and we guarantee that you will enjoy many years of milling without the slightest problem.

AGRISAN NATURPRODUKTE GMBH
Christine Thurner



Control Elements of the Hand Mill MH 8

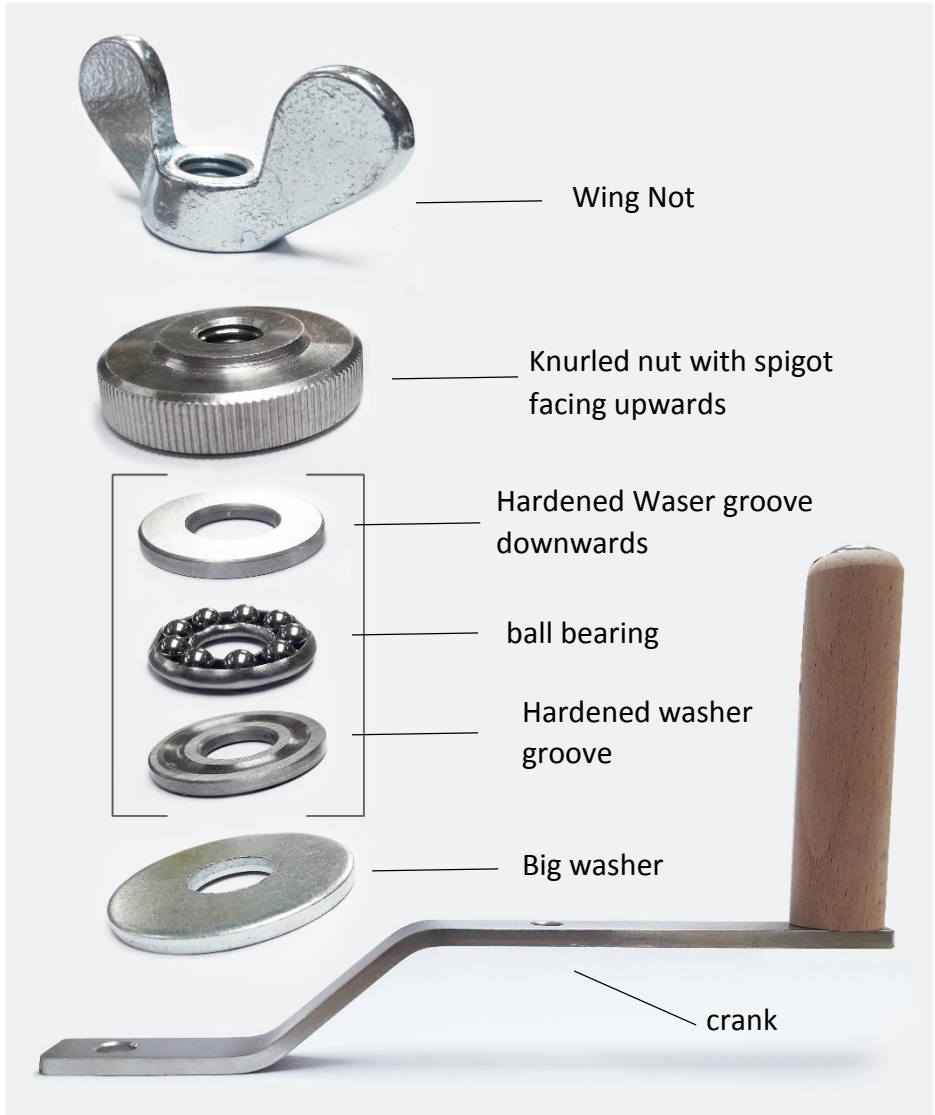

Assemble in this Order onto the funnel (thread)

Please read the operating and safety instructions carefully before using the appliance for the first time

Assembly of the hand mill:

Please see the picture on page 3

1. Position the winch onto the threaded rod.
2. Then fit the washer.
3. Then fit the bearing.
4. Position the knurled nut with the spigot facing upwards until you have contact with the bearing.
5. Now turn the knurled nut back by one turn and so secure (counter-lock) the same.

You now have the best adjustment to begin the milling process!
The distance between the bearing and the knurled nut determines the degree of fineness of the flour.

For a finer milling result tighten the knurled nut step by step with renewed locking checks.

For a coarser milling result loosen the knurled nut step by step with renewed locking checks.

Attention:

If the knurled nut is not sufficiently secured by the wing nut, it may be over-tightened during the milling process, causing the mill to either block or become difficult to operate.

Correct Countering (Locking):

The easiest way is for you to use your left hand to hold the knurled nut and with your right hand the wing nut.

Hold the knurled nut firmly and turn the wing-nut in the clockwise direction on to it. So the knurled nut cannot become over-tightened when milling.

Basic rules for more safety – important safety instructions

Please read these operating and safety instructions carefully before operating your grain mill.

This will avoid errors and accidents and can secure the functional and safe use of the appliance.

Please keep this user manual and should you hand the mill to any third-party ensure the next user has the manual.

This corn mill is exclusively designed for the home production of flour and grits.

Operation of the appliance by children only under adult supervision

1. Read all instructions carefully.
2. The appliance must only be used for its intended purpose (household production of flour and grits)
3. Before operating the appliance, it is essential to check its flawed condition. Repairs may only be carried out by persons authorized by Agrisan GmbH
4. The seller must immediately be informed of any defects.
5. The safety devices must not be modified or turned off.
6. Use the mill only on a flat, stable surface.
7. The mill must be positioned so that slipping of the mill itself or the flour container during the milling process cannot occur.
8. Monitoring of the appliance is essential when being used near children
9. Keep the unit out of the reach of children.
10. The appliance must not be operated by persons with either physical or mental handicaps or those who do not have sufficient knowledge of the safe operation of the appliance. The exception to such operation of the appliance is when used

under supervision of persons responsible for the safety of any handicapped persons.

11. The exterior of the mill must only be wiped clean with a damp cloth.
12. During the milling process never reach into the funnel.
13. During the milling process never reach into the area of the mill stone or the flour outlet
14. If the device is no longer needed keep it in a safe place.
15. Never undertake any repair or do-it-yourself work – even if very simple ones yourself.

Suitable site

The Salzburger grain mill is made of high quality solid wood. Wood is a natural product which is influenced by moisture and changes in temperature. Place your mill in a dry place and protect it from any direct source of heat (direct sun, oven etc.).

GRAIN TYPE/CORN TYPE

Please make sure to use only dry and cleaned grain as moist grain will smear the millstones. Please see the chapter on smeared millstones. Poorly cleaned grain can include dirt or foreign particles (e.g. small stones etc.) which can damage the millstones.

Mill to the desired degree of fineness in one process, re-milling can result in the grain input funnel and will not give satisfactory milling results. The Salzburger Grain Mill will give you fine and flaky flour in one milling process.

Grain Type	Setting	Remarks
Wheat, rye, buckwheat, corn, rice, oats, barley, millet, green- spelt, spelt	Any degree of fineness	Do not use popcorn, only use regular dried corn
Oats and soy beans	Adjust the mill to a coarser setting	
Linseed	Only coarse grinding (coarse setting)	
Oily seeds, all spices	Mix with wheat, rye, barley, corn etc, and process on a coarser setting	
Caraway, coriander, anise, fennel, cloves, and cinnamon	Small amounts can be ground without any admixtures	Clean milling chamber and flour output



Storage of the grain indoors in places with up to 60% humidity, allows a problem-free processing. Storage at humidity levels over 60 % can result in smearing of the millstones during the processing.

Especially during wet or damp wet conditions store smaller quantities of grain in an air-permeable bag (linen, etc.) near a source of heat.

Care and Cleaning

To maintain the technical operation of your mill no care or maintenance is necessary. Normal functioning of the mill means that small amounts of flour will be left in the milling chamber. If you do not intend to use your mill over a period of some weeks, we recommend that for hygienic reasons you have to clean it thoroughly.

To do this, mill a handful of rice or grain at a “coarse setting” afterwards open the mill and using a vacuum cleaner remove all residue flour from the milling chamber. Leave the mill open and if at hand place a few bay leaves inside.

Moths love the dark and their peace and will only start attacking any wood if they are faced with extreme emergency. If you constantly use your mill you will not other moths any comfortable surroundings.

Prior to delivery the shaft bearing has been oiled, but application of a little sewing machine oil will ensure long-life of your mill. The outer surfaces of your mill need only to be wiped with a damp cloth and then dried at once.

Occasionally roughen the outside surfaces with sand paper and then treat them with beeswax oil.

Milling Process

Fill appropriate material into the funnel.

Using the clamps supplied with the mill fix it firmly onto a stable table – table surface over the corner.

Slowly begin to rotate in a clockwise direction.

The degree of fineness of the flour can be adjusted during the milling process.

Please see the chapter on „**Adjusting the degree of fineness.**”

Interrupting the milling process

When beginning to mill hard grain types such as corn, rice or durum wheat At fine settings and with a full funnel the mill can become blocked. Please re-adjust the setting from? ne to coarser until the mill begins to turn then during the milling process adjust the setting in a clockwise direction until the desired degree of? neness is reached.

When milling wheat, spelt or rye should the mill stones become blocked, please give the funnel a short turn backwards in the ANTI-CLOCKWISE direction.

A tip: the less? our is between the millstones the easier the funnel can be turned.



Adjusting the degree of fineness

Coarse / fine adjustment is possible by using the knurled nut and is locked by applying the wing nut.

Coarse Setting:

Loosen the wing nut, adjust the knurled nut in the anti-clockwise direction until you have the desired setting. Then tighten the wing nut.

Fine Setting:

Loosen the wing nut, adjust the knurled nut (in the clockwise direction) until desired grade is reached. Then tighten the wing nut.

The MH 8 grain mill can be continually adjusted and according to the adjustment chosen, produces the results required.

Opening the milling chamber

The unity of the funnel and upper millstone is fixed by the fine adjustment mechanism on the base part of the mill. The fine adjustment is located on the upper part of the mill. By unscrewing the fine adjustment the funnel can be lifted off.

Place the funnel unit onto the guide rod which is fixed in the lower part of the part of the appliance. Please refer to the drawing to see the order of the components.

Please clean the stones before attaching the funnel unit.

If your grain was not dry enough for the chosen mill setting, the grain will smear the millstones. A hard, but smooth layer will appear on the millstones. Take a kitchen knife and scratch the layer from the millstones. Clean the grooves in the millstones. In order to clean the millstones, it is usually only necessary to process 1 or 2 hand-falls of rice or grain at a coarse setting. Any adhesions can be easily and quickly removed.

Damp grain will cut like bread, whereas as dry grain will chip off. Damp grain:
Dry the amount required before milling for approx. half an hour in the oven
at 50°C.



IMPORTANT: Prior to milling the grain leave it to cool off.

Problems and Solutions

Problem	Cause	Solution
<i>There is no flour output</i>	<p>The crank cannot be turned. The knurled nut has not been correctly countered (locked) or has been turned too tightly!</p>	<p>This means that the mill stones will be turned tighter and tighter together, so that milling is no longer possible. Please see page 4.</p>
	<p>Smeared Mill stones Should you see a white ring on the outer edge of the mill stones that is a clear sign that you have been milling either damp grain, been milling too finely or milling oily kernels (e.g. linseeds). Oily kernels stick between the mill stones, make them become so smeared, that milling is no longer possible.</p>	<p>Unfortunately you can only feel your way through processing „damp grain“. The mill stones do, however, react very sensitively towards dampness. If you are not sure dry the grain for half an hour in your oven and then let it cool properly.</p>
<i>Metal shavings in the flour</i>	The knurled nut was not assembled correctly	Please control if you have assembled the knurled nut with the spigot facing

<i>Too little flour production</i>	The knurled nut has not been correctly countered (locked) or has been turned too tightly!	Open the the knurled nut in steps until you have the degree of fineness required and then lock (counter) the same. Correct locking
<i>Flour is too coarse</i>	The knurled nut was too loose	Tighten the knurled nut in steps until you have desired degree of fineness and then lock (counter) the same correctly. Please see Page 4.

Bogenhofener whole wheat bread

750 g of ground spelt, 250 g of ground rye, 1 packet 7 g) dry yeast, 4 tbsps. of sunflower seeds, about 1 tbsp. each of salt and bread spice, sesame seeds and linseed, approximately 600 ml of lukewarm water.

Preparation

1. Knead all the ingredients to a dough, kneading until it no longer sticks.
2. Leave to rise to twice its size.
3. Then place the risen dough into a bread baking tin.
4. Bake at 220°C for 15 minutes and for 45 minutes at 180°C.
5. Remove from the tin immediately!

Spelt brioche

500 g fine spelt flour, a pinch of salt, 2 tbsps. natural sweetener, 1/4 lit. WA-tier or soy milk, grated rind of a lemon, 1 packet of dry yeast, 100 g raisins, 2 tbsps. diet margarine or soy-milk

Preparation

1. Knead the above ingredients to yeast dough.
2. Leave to rise for approx. 20 minutes. Knead again and leave to rise for another 15 minutes
3. Now knead again and braid to form a plate.
4. Bake at 180°C for about 40 minutes. Brush several times with either margarine or soy milk.

Warranty

Thanks to many years of experience, us grain mills are produced and controlled directly in us factory. We only use selected materials and motors.

Warranty for natural stone mills: 12 years' warranty from 23.4.2012

24 year warranty on breakage and break out of stone particles, provided the mill is used according to the instructions in the User's Manual and the manufacturer's specifications.

The granite millstones will be exchanged free of charge if the milling capacity is influenced by breakout or breakage.

Terms of Warranty:

The warranty applies to all occurring material or processing defects, and depends on the choice of the manufacturer to replace, repair or refund the mill.

It does not include the replacement of consequential damage nor loss due to natural wear and tear or to damages caused by the use of force and/or improper use or lack of improper maintenance.

Intervention by any unauthorised persons, who are neither employed by our

company nor authorised by us, results in the warranty becoming invalid. The warranty applies to all appliances intended for the entire European market.

Fragile parts are excluded from the warranty. Wood is a living material and small cracks in the wooden casing may arise. These are not considered to be material defects.

In case of any warranty claim your statutory warranty rights, which you can independently assert against us, do, of course, remain upright in case of any defect and are not restricted by the warranty.



Proof of purchase must be provided for any warranty claim.

Warranty claims:

Within the claim period, we do, of course, carry out any necessary repair work completely free of charge on defects in material and workmanship during the warranty period.

Before you return the appliance:

However, before you return the appliance to us we request you to send us a short mail or to call us. The problem may only be very small or even due to operating errors. It may only be a small insignificant fault, which can be easily solved. In this way you can save your mill from any unnecessary transport strain.

Shipping - Packing:

If necessary, for return shipments please pack your mill in its original box or use a sufficiently strong cardboard box with enough protective material. Please use enough stuffing material such as newspapers, cardboard, etc.

Please send only the mill without any accessories, lid, owner's manual etc.
Please also include information on the problem with the mill, which you want solved and also your phone number should be need to contact you if necessary.

Please return the parcel sufficiently stamped. Please also consider taking transport insurance, which only incurs slightly higher postage costs.

Warrantor and warranty address:

AGRISAN NATURPRODUKTE GMBH

Gasteigweg 25
A 5400 Hallein
Österreich

Tel. 0043 6245 83282

email: info@agrisan.at

Internet: www.getreidemuehle.com

Technical Data: MH 8

Required Space: 30 x 30 cm

Height: 39 cm

Drawer: 20 x 28 x 7 cm

Mill stones: Granite

Mill stone diameter: 22 cm

Weight: 12 kg

Milling capacity: à 100 g/min